

VT04, VT04A and VT02 Visual IR Thermometers

Detect issues instantly!

Eliminate the need for multiple temperature measurements. Fluke Visual IR Thermometers combine the convenience of a spot thermometer with the visual advantage of an infrared heat map.

- See temperature patterns in a blended heat map image
- Intuitive enough to use right out of the box
- Pocket-size design
- Breakthrough affordability


Designed to see it all

Every Fluke Visual IR Thermometer has a built-in digital camera with an infrared heat map overlay to instantly identify the exact location of the problem.

Center-point temperature (°C/°F)


Hot and cold markers

Digital image for context Clearly see that breaker 20 is overloaded and communicate your findings.

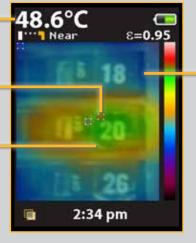


Infrared heat map overlay



 

50% heat map

 VT02



48.6°C

25 % heat map

75 % heat map

VT04/

VTO4A

Technical Data

37.4°C

48.6°C





Key features of a visual IR thermometer:

Fits your budget

Fluke VT02, VT04 and VT04A Visual IR Thermometers give you bold temperature features at a price that allows you to outfit your entire team.

Intuitive interface

Get to work as soon as you take it out of the box.

Pocket-size design

Handy when you need it—easily fits in your tool bag or pocket.

Infrared heat map blending

Blend digital image with heat map overlay at 0%, 25%, 50%, 75%, and full infrared with one button.

Center-point temperature and

hot and cold markers

Hot and cold markers automatically identify hottest and coldest spots within field of view.

SmartView® reporting software

Store up to 10,000 images per GB on included SD card and make reports with Fluke's professional reporting software.

Batteries that work as long as you

Choose between a rechargeable Lithium-ion battery (VTO4) and 4 AA batteries (VTO4A and VTO2). Both options last 8 hours.

Additional benefits of VT04/VT04A

See more with PyroBlend® Plus optics

- Excellent field of view for tight spaces: 28° x 28°
- Four times sharper images than VT02

Alarm and time lapse features

- High/low temperature alarms—high and low temperature alarms flash whenever the temperature threshold is exceeded
- Time-lapse image capture—automatically capture images at set intervals of time without being there
- Auto-monitor alarm—automatically capture images after a user-selected temperature threshold has been exceeded



Specifications


| Key features | VT02 | VTO4/VTO4A |
|--|---|--|
| Built-in digital camera | Ч | les les |
| Infrared heat map overlay | Yes, five blending modes | |
| Image optics system | PyroBlend® optic | PyroBlend® Plus optic 4x sharper image than VTO2 |
| Field of view | 20° x 20° | 28° x 28° |
| | | |
| High/low temperature alarms | _ | Yes |
| Time-lapse image capture | _ | Yes |
| Auto-monitor alarm | _ | Yes |
| Battery type | Four (4) AA batteries | VTO4: Li-ion rechargeable; VTO4A: Four (4) AA batteries |
| Ergonomics | Slim pocket-sized design | |
| Hot and cold markers | Yes | |
| General specifications | | |
| Battery life | Eight (8) hours | |
| Temperature measurement range | -10 °C to +250 °C (14 °F to 482 °F) | |
| Temperature measurement accuracy | ± 2 °C or ± 2 % | |
| Temperature measurement | Yes, center-point | |
| Storage medium (micro SD card) | Stores up to 10,000 images per GB (4 GB card included) | |
| Infrared spectral band | 6.5 μm to 14 μm | |
| Level and span | Auto | |
| Focus mechanism | Focus free | |
| Alignment of blended visual image and infrared heat map | NEAR: <23 cm (9 in) from target FAR: >23 cm (9 in) from target | |
| Dimensions | 21 cm x 7.5 cm x 5.5 cm (8.3 in x 3 in x 2.2 in) | |
| Weight | 385 g (13.5 oz) | VTO4: 350 g (12.5 oz); VTO4A: 385 g (13.5 oz) |
| File format | .is2 format saved to SD card. User can create professional reports or export images in SmartView® (BMP, DIB, GIF, JPE, JFIF, JPEG, JPG, PNG, TIF and TIFF); go to Fluke website to download software free | |
| Safety and compliance | CFR47: 2009 Class A. Part 15 subpart B; CE: EN 61326:2006; IEC/EN 61010-1:2010 | |
| Warranty | Two-years | |




Key applications

Hot and cold spots can't hide anymore in electrical, HVAC, mechanical, and automotive applications. Watch videos and get application notes at www.fluke.co.uk/vtapps.

Overloaded breakers

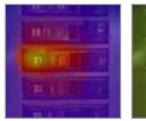


Faulty air damper

 




Overheating motor

 

Brake rotor

 



Ordering information

FLK-VT04 VT04 Visual IR Thermometer FLK-VT04A VT04A Visual IR Thermometer FLK-VT02 VT02 Visual IR Thermometer

Included with product*

VT04: includes a hard case, micro SD card and adapter, a lithium ion rechargeable battery, and micro USB charger/power supply (including worldwide adapters). **VT04A:** includes a soft case, micro SD card and adapter, and 4 AA batteries. **VT02:** includes a soft case, micro SD card and adapter, and 4 AA batteries.

All models include printed quick start guides in English, Spanish, German, French and Simplified Chinese; other languages are available to download from the Fluke website at www.fluke.com/vtquickstart. The users manual (in multiple languages) and SmartView® software (18 languages) are available for free download from the Fluke website at www.fluke.com/vtmanual and www.fluke.com/vtsmartview.

Optional

FLK-VT04-CHARGER Replacement Charger for VT04 **FLK-VT04-BATTERY** Replacement Battery for VT04 **FLK-VT04-HARD CASE** Hard Case for Visual IR Thermometers **C90** Soft Case for DMMs and Visual IR Thermometers

Save money with Fluke kits:

| FLK-VTO4-MAINT-KIT | Includes a VTO4 Visual IR Thermometer and a 1507 Insulation Multimeter | |
|--|--|--|
| FLK-VT04-HVAC-KIT | Includes a VTO4 Visual IR Thermometer, 902 True-rms HVAC Clamp Meter and a 116 Digital Multimeter. | |
| FLK-VT04-ELEC-KIT | Includes a VTO4 Visual IR Thermometer, a 117 Electricians Multimeter and a 376 AC/DC True-rms Clamp Meter | |
| *The following accessories have been removed from the visual IR thermometer packaging: lanyard, hard carrying case (still included with VTO4), SmartView® and owner's manual CDs (available for download from the Fluke website). | | |

Fluke. Keeping your world up and running.®

Fluke Europe B.V. P.O. Box 1186 5602 BD Eindhoven The Netherlands Web: www.fluke.co.uk

For more information call: In Europe/M-East/Africa +31 (0) 40 2 675 200 or Fax +31 (0) 40 2 675 222

Fluke (UK) Ltd. 52 Hurricane Way Norwich, Norfolk NR6 6JB United Kingdom Tel.: +44 (0) 20 7942 0700 Fax: +44 (0) 20 7942 0701 E-mail: industrial@uk.fluke.nl Web: www.fluke.co.uk

©2013-2014 Fluke Corporation. All rights reserved. Data subject to alteration without notice. 3/2014 Pub_ID: 12152-eng

Modification of this document is not permitted without written permission from Fluke Corporation.